


MAXISTAB™ S-SERIES

Process safety, efficiency,
and extended lifespan of the
DOWCLENÉ™ 16 Series



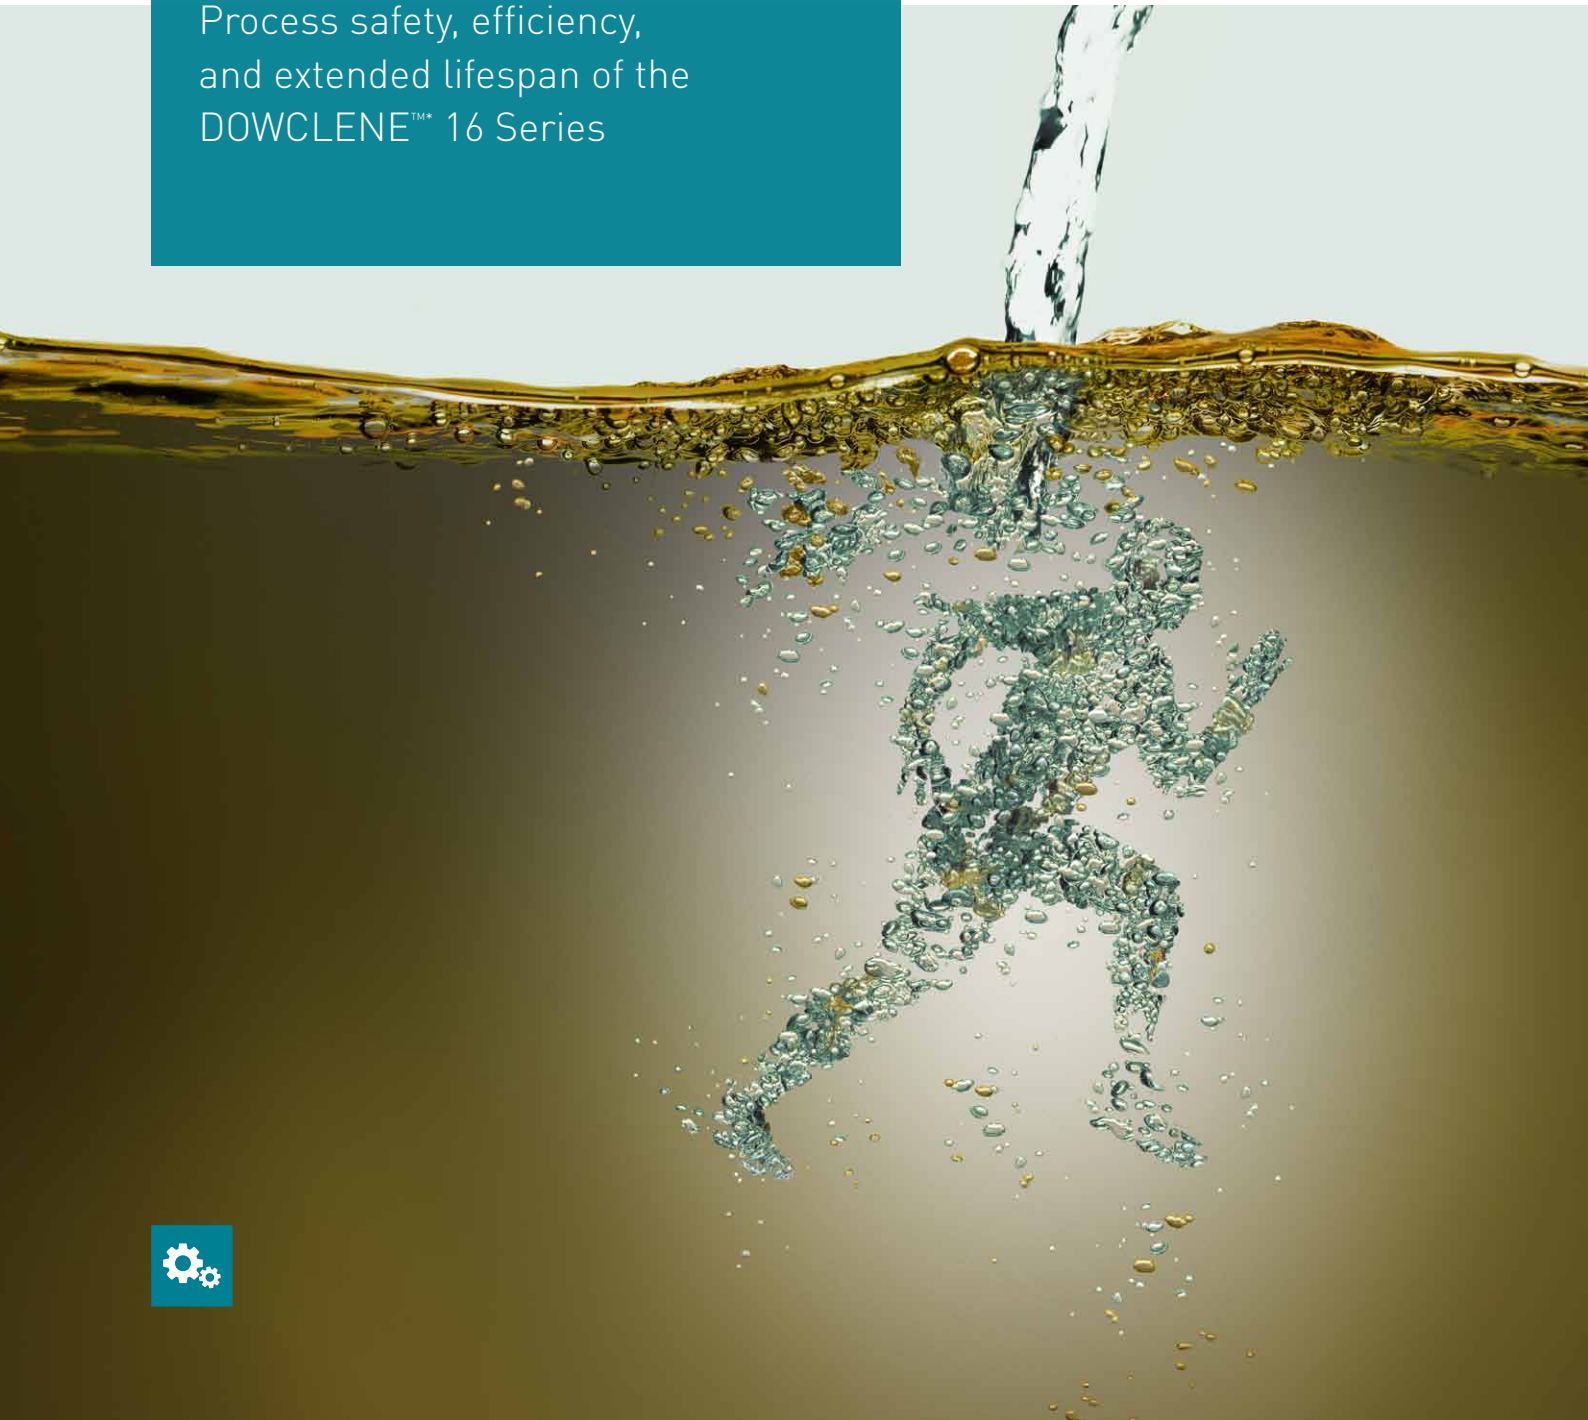

YOUR GOAL:
CLEAN PARTS
AND A SAFE
PROCESS



MAXISTAB™ SD-5:

EFFECTIVE CONTACT-FREE STABILISATION OF ORGANIC ACIDS AND SULPHURISED OILS

MAXISTAB™ SD-5 is a sump stabilizer specially developed to counteract the effects of organic acids and sulphur compounds. This technical innovation enables contact-free stabilisation: It is introduced into the distillation unit and is thus effective at the origin of potentially harming products.

THE MAIN BENEFITS OF USING MAXISTAB™ SD-5 ARE:

- **Extended lifespan of DOWCLENE™ 16 Series bath**
Preventive stabilisation to avoid issues with organic acids and sulphur compounds
- **Safeguard for your cleaning machine**
Extended lifespan of gaskets and critical machine parts such as coolers, seals, valves, and others
- **Increased process stability**
Less downtimes for machine maintenance
- **Better cleaning experience**
Less odour as well as improved cleaning results due to inhibition of metal discoloration



PARTS CLEANED IN DOWCLENE™ 1601 WITH AND WITHOUT MAXISTAB™ SD-5:

The stabilizer inhibits discoloration of copper-based non-ferrous metal. Not only are the parts clean – they gain in appearance.



BETTER CLEANING EXPERIENCE:
LESS ODOUR ON THE PARTS



MAXISTAB SD-7 AND MAXISTAB SV-9:

STABLE MODERATE ALKALINITY FOR REMOVING CHLORINATED OILS

With MAXISTAB™ SD-7 and MAXISTAB™ SV-9, SAFECHEM offers an innovative two-component stabilisation process combining sump and volatile stabilisation.

MAXISTAB™ SD-7 is a sump stabilizer that is added to the cleaning system through the distillation unit where it acts and remains. MAXISTAB™ SV-9 is volatile and therefore effective throughout the entire cleaning system. The dosed use of the stabilizer system allows a stable, process-safe alkalinity and thus a long service life of plant and solvent. With this innovation, it is now possible to clean off even highly chlorinated oils with the DOWCLENETM 16 Series in a process-safe manner.

THE MAIN BENEFITS OF USING MAXISTAB™ SD-7 AND MAXISTAB™ SV-9 ARE:

- **Extended lifespan of DOWCLENETM 16 Series bath**
Preventive stabilisation to avoid issues with chlorides
- **Safeguard for your cleaning machine**
Extended lifespan of gaskets and critical machine parts such as coolers, seals, valves, and others
- **Increased process stability**
Less downtimes for machine maintenance
- **Basic protection**
Reduction of organic acids and sulphur related challenges



MAXICHECK™ DCL-1S TEST KIT

Regular bath monitoring is indispensable for optimal solvent management. For best use of MAXISTAB™ SD-7 and MAXISTAB™ SV-9, the new MAXICHECK™ DCL-1S Test Kit is recommended for periodic checks of the solvent quality. It contains simple measurement methods for the determination of pH-value, acid content, and process-safe alkalinity that can be done on a regular basis.


OUR SOLUTION: DOWCLENÉ™* 16 SERIES MODIFIED ALCOHOL AND MAXISTAB™ S-SERIES STABILIZERS

Component cleaning is a critical step when it comes to ensuring quality in many applications. The ideal solution requires a product-service concept co-ordinated with the entire manufacturing process as well as expertise. With the distillable solvents of the DOWCLENÉ™* 16 Series, SAFECHEM, the pioneer of modified alcohols, offers a solution suitable for a wide range of applications. And with the MAXISTAB S-Series Stabilizer Systems, SAFECHEM is further expanding the possibilities of this cleaning medium.

The MAXISTAB S-Series Stabilizer Systems can optimize the cleaning process in case of organic acids as well as when using sulphurised and / or chlorinated oils. They are distinguished by their innovative, contact-free mode of operation in the distillation by means of a synergistic 2-component-system.

HIGH PERFORMANCE STABILIZERS FOR A STABLE CLEANING PROCESS

The stabilizer systems of the MAXISTAB™ S-Series were specially developed to counteract the effects of organic acids, sulphur compounds, hydrochloric acid and chlorides – and to prevent their build-up in cleaning systems with the DOWCLENÉ™* 16 Series.

Typical physical parameter			
	MAXISTAB™ SD-5	MAXISTAB™ SD-7	MAXISTAB™ SV-9
Boiling range [°C]	> 235 °C	> 235 °C	> 85 °C
Density	0.99 g/cm ³	1.01 g/cm ³	0.85 g/m ³
Flash point	> 100 °C	> 100 °C	23 °C
Viscosity [40° C]	18 cSt	19 cSt	5 cSt

WITH THE MAXISTAB™ S-SERIES STABILIZERS, YOU GET:

- Prolonged lifetime of DOWCLENEX™ 16 Series bath
- Safeguard for your cleaning machine
- Increased process stability
- Better cleaning experience
- Safe process with sulphurised and/or chlorinated oils

Note: The information and data included in this document have been carefully reviewed. However, SAFECHEM does not warrant that any information and data are complete, accurate or up-to-date. Furthermore, the information and data included in this document do not constitute product specifications of SAFECHEM products. It is solely the buyer's responsibility to determine whether SAFECHEM products are appropriate for buyer's use. Liability claims against SAFECHEM arising from using or not using the information featured in this document are excluded in principle unless there is evidence of wilful intent or gross negligence on SAFECHEM's part or other cases of compelling liability prescribed by statutory law.

The use of trade names, trademark rights, patents or other industrial or intellectual property rights in this document shall not authorise the use of the foregoing names, rights or brands freely, as they may be the protected or registered rights of third parties or SAFECHEM even if they are not expressly identified as such.

In general, SAFECHEM holds the copyright to the entire content of this document. The duplication or use of SAFECHEM's product designations, images, graphics and texts is not permitted without SAFECHEM's explicit written consent.

™ Trademark of SAFECHEM

™™ Trademark of The Dow Chemical Company

SAFECHEM EUROPE GMBH
Tersteegenstr. 25
40474 Duesseldorf
Germany
Phone: +49 211 4389-300
Fax: +49 211 4389-389
service@safecchem.com
www.safecchem.com

